
FISKARS® PRO

Blade change instructions Fixed Blade Utility Knife (1027223)

CAUTION: For your protection wear gloves, as well as ANSI-approved safety glasses during this operation.



Make sure blade is retracted.

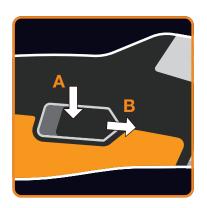

2. Press lock button (A) and slide until handle springs open (B).



Unfold knife handle completely.



Remove and replace blade.



5. Close knife handle until it clicks.