


FISKARS® PRO

Blade change instructions


Snap-off Utility Knives (1027227 | 1027228)

CAUTION: For your protection wear gloves, as well as ANSI-approved safety glasses during this operation.

EN

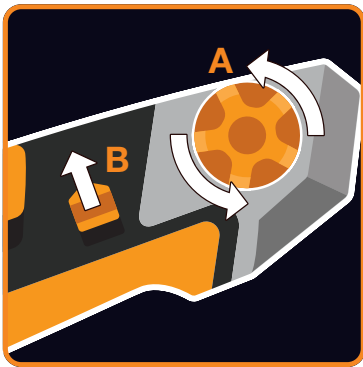

1. Turn wheel counter clockwise until it stops (A), then push the blade lock up (B).

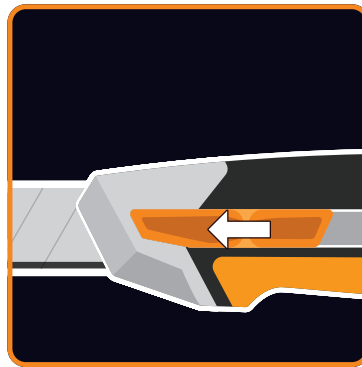


2. Push the blade slider out and make sure the blade is fully extended.



3. Pull the blade out from the front of the knife.



4. Push new blade in until it clicks.

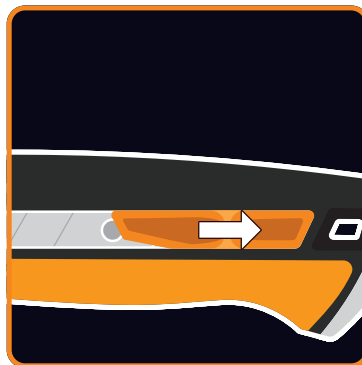

5. Retract the blade fully.



5. Push the lock down into the locked position.